

PFAFF®

This is a great way to get creative with your decorative stitches, learn to use your feet and create a beautiful fabric bowl at the same time! The surprise embroidery on the bottom of the bowl is a whimsical treat for the eye!




Sewing Supplies:

- Pfaff creative vision, creative 4.0 or creative 2.0
- One 21 1/2" square of fabric for the inside
- Four 9 5/8" squares of fabric (can be the same or different) for the outside
- 18" Square of Fusible Fleece
- INSPIRA® Tear-A-Way Stabilizer
- Quick Easy Mitred Binding Tool #140002480
- Sewing Thread
- 40 wt. Rayon Embroidery Thread
- Bobbin Thread
- INSPIRA® 2.5 Twin Needle #620073996
- Bi-level Topstitch Foot with IDT™ #820676-096
- Sewing Star Foot with IDT™ #820654-096
- Water Soluble Marking Pen
- 1/2" wide Steam-A-Seam 2
- Buttonhole/Eyelet Cutter #2020
- Sew-on button Foot #820473-096
- Four 3/4" buttons



Sew:


1. Thread with sewing thread top and bobbin.
2. Select Straight stitch center needle position. Place two of the squares together and stitch. Repeat with the other two.
3. Press the seams open.
4. Select a decorative stitch and stitch over the seam. You can do this with your sewing thread on top or you can put 40 wt. decorative thread on top and leave the sewing thread in the bobbin.

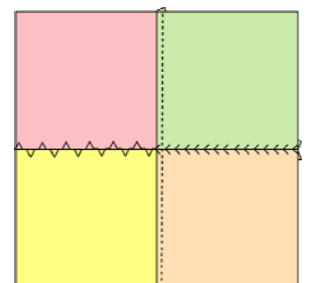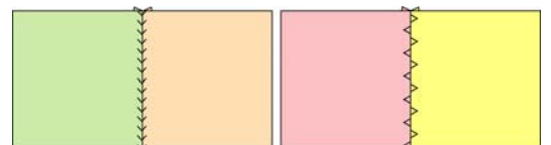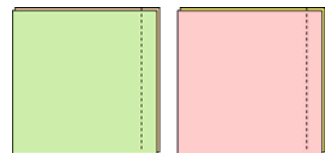

5. With sewing thread top and bobbin, select an Overlock stitch or Standard overcast stitch. Stitch the two sewn square pieces together to form one large square.
6. Press the seam to one side. Snap on your Bi-level Topstitch Foot with IDT™. Select Straight stitch. Insert your square into your Pfaff sewing machine so that the seam allowance is to the right. Use the inner left side of the presser foot to guide the fabric. Adjust the needle position to the left to get the topstitching distance you like.
7. Place your squares on a piece of stabilizer and randomly stitch decorative stitches over the square. This is where you can try out all those pretty stitches! Snap on your Sewing Star foot. Thread with 40 wt. rayon thread on top and bobbin thread in the bobbin. Try combining some of the stitches, using Sequencing. Insert a twin needle and set your Pfaff for the size of the twin needle you are using. Then try some different stitches to see if you like the effect.
8. Tear off the excess stabilizer, press your square and trim to 18" x 18".
9. Place the fusible fleece on the wrong side of the stitched square and press to fuse in place.

Embroider the Surprise, Inside:


1. Embroider the surprise embroidery! In the center of the 21 1/2" x 21 1/2" square, embroider the design of your choice. We chose a flower design from the Pfaff creative vision. Thread with 40 wt. rayon thread on top and bobbin thread in the bobbin. Hoop your fabric with INSPIRA® Tear-A-Way Stabilizer and stitch the design.

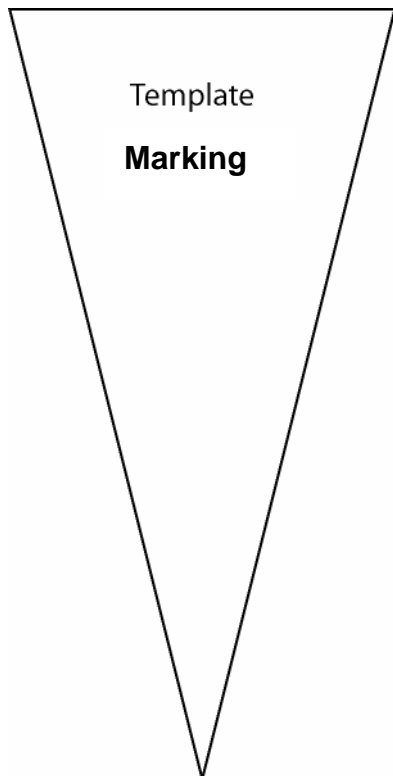


2. Tear off the excess stabilizer. Press.

Putting It All Together:

1. On the wrong side of the stitched square, use the template given to mark the stitching lines. Center the template over the seam lines on each of the four sides as shown.

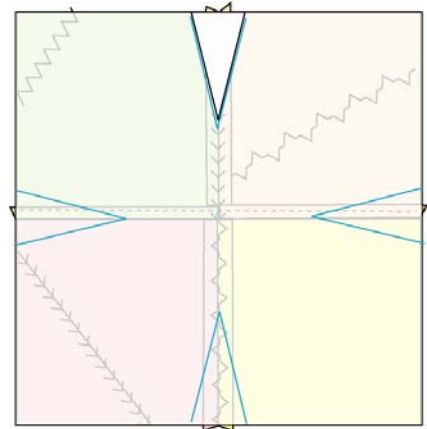


2. Place the marked pieced square right sides together on the inner embroidered piece with the pieced square centered over the design. There should be approximately 1 1/2" inner fabric extending out on each side. Pin.
3. Stitch on the marked lines. Do not extend the stitching beyond the inner pieced square.
4. Cut straight in from the edge, and then continue cutting 1/4" inside the stitched line. Repeat for the other stitched lines.
5. At the inside of the "V", clip to the stitching. Turn right side out and press.
6. Fold the edge of the larger fabric to meet the edge of the smaller fabric. Press. Fold again to form the binding.
7. Using your Quick Easy Mitred Binding Tool, miter the corners on the binding following instructions included with the Mitred Binding Tool.
8. Place Steam-A-Seam 2 underneath the binding and press with steam, to fuse in place.

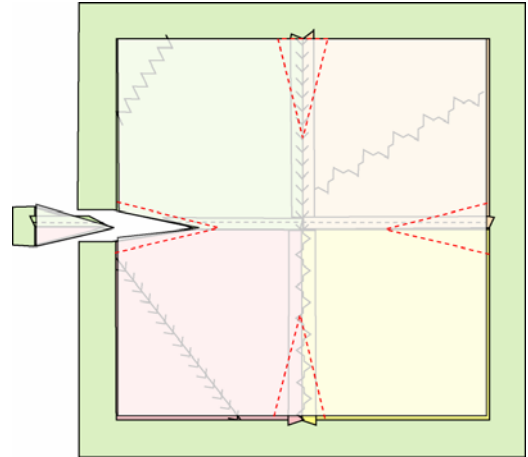

9. Select a pin stitch  and stitch the binding through all the layers.

Create your Decorative Buttonholes: creative vision

1. Toggle to Embroidery Mode 

2. Touch Selection Menu 


3. On the task bar, select the Stitches icon. 

4. Touch Category 1  , Subcategory 3  . Select buttonhole 8 


5. Touch Selection Menu 

6. Select 5. 2.1 

7. Arrange as shown:

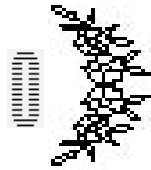

8. Long-touch the Multi Select icon  to select both stitches.


9. Touch the Group icon  to combine the stitches into one design.

10. Center the design in the embroidery field by touching the Wheel center icon




11. Hoop INSPIRA® Tear-A-Way Stabilizer in the 120mm x 120mm hoop. Attach the 120mm x 120mm hoop.

12. Touch the Embroidery toggle icon  to change to embroidery stitch out mode.

13. Place the marked corner of your bowl on the stabilizer. With the embroidered side of your bowl up, touch  to baste the bowl corner to the stabilizer. Embroider a buttonhole on each corner.

creative 4.0

1. Toggle to Embroidery Mode 

2. Touch Selection Menu 

3. On the task bar, select the Stitches icon .


4. Select 4.6.8, Heart stitch


5. Touch Duplicate 

6. Touch Mirroring side to side 

7. Touch Selection Menu 

8. Select 1.3.8.

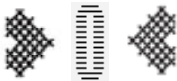9. Arrange as shown: 


10. Long-touch the Multi Select icon  to select all stitches.

11. Center the design in the embroidery field by touching the Wheel center icon



12. Hoop INSPIRA® Tear-A-Way Stabilizer in the 120mm x 120mm hoop. Attach the 120mm x 120mm hoop.

13. Touch the Embroidery toggle icon  to change to embroidery stitch out mode.


14. Place the marked corner of your bowl on the stabilizer. With the embroidered side of your bowl up, touch  to baste the bowl corner to the stabilizer. Embroider a buttonhole on each corner.

creative 2.0

1. Attach your Sensomatic buttonhole foot.


2. Using your direct selection buttons select buttonhole 31.


3. On the embroidered side of your bowl, stitch a buttonhole approximately 2" from the corner. The buttonhole can be either horizontal or vertical.

4. Using your direct selection buttons, select stitch #139  or stitch of your choice.

5. Touch F2 and activate tie on, tie off.

6. Touch F2 to close the screen.

7. Begin stitching the heart next to the buttonhole. While stitching, touch the reverse button . Your creative 2.0 will stop at the end of the heart stitch.

8. Touch Mirror side to side .

9. Repeat to stitch another heart on the other side of the buttonhole.

Finish your Bowl:

1. Fold the corner of the bowl so that the embroidered side of your bowl is together. Stitch the seams, starting at the outside edge, with a $\frac{3}{8}$ " seam allowance and tapering to a point like a dart.



2. Using your buttonhole cutter, open your buttonholes. Mark the location of your button placement.
3. Snap on your Sew-on Button Foot. Sew the buttons in place.