


PFAFF

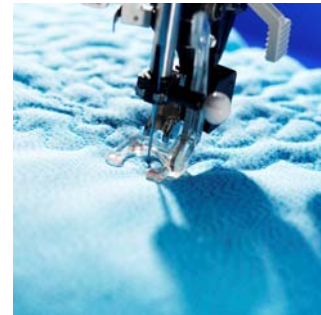

Open Toe Free-motion Foot

Part No. 820544-096

The Open Toe Free-motion Foot is for wonderful free-motion sewing and quilting. This foot has an extra large opening cut out in the front to give you an optimal viewing when free-motion sewing and quilting. The fabric is guided manually when free motion sewing or quilting.

1. Disengage the IDT.
2. Carefully loosen the small silver screw on the back of the presser foot holder until the crosshole is accessible.
3. Squeeze the presser foot gently together and guide the pin of the foot into the crosshole of the presser foot holder as far as it will go. Make sure the clear arm is above the needle clamp.
4. Tighten the silver screw.
5. Lower the Open Toe Free-motion Foot into the free-motion/darning position by either selecting the free-motion icon on the touch screen of your machine or manually setting the presser foot lifter in the free-motion position.
6. Lower the feed dogs.
7. Select a straight stitch or a zigzag stitch.
8. Keep an even speed, manually move your fabric.

Remember, because the feed dogs are lowered, you must move the fabric. For even stitches, move your fabric at a smooth even flow.